


## Wraptite Petrolatum Wax Tape Installation Guide

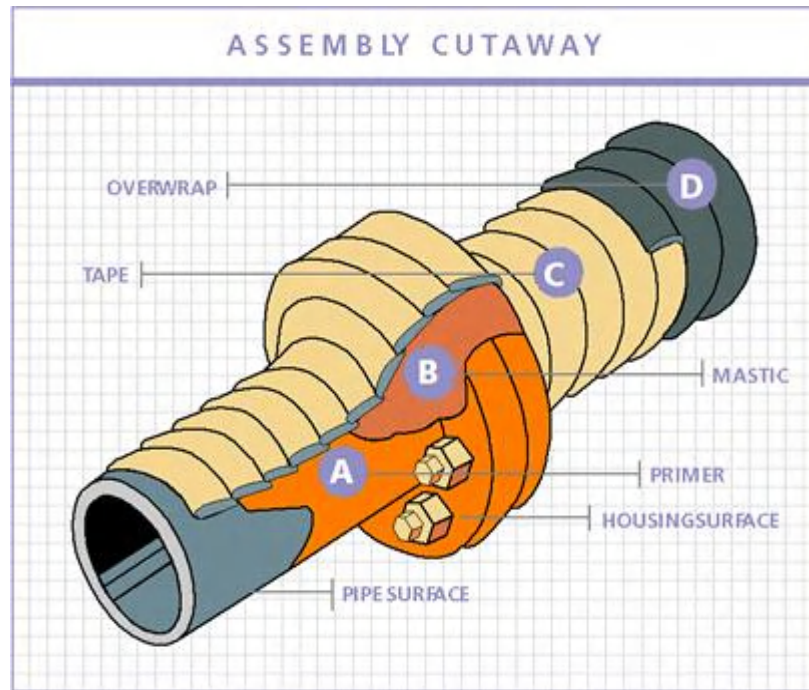

### INSTRUCTIONS:

1. Remove all contaminants such as dirt, oil, scale and excessive moisture.
2. Hand apply or brush WRAPTITE WTP1 Paste (“A” primer) evenly over surface to displace remaining moisture and ensure proper adhesion, “wetting out” entire substrate.
3. When applicable, press WRAPTITE WTP1 Filmastic (“B” mastic filler/putty) into surface irregularities to eliminate air pockets.
4. Apply WRAPTITE WTP1 Tape (“C” tape) wrapped spirally around prepared surface using even tension. An overlap of 55% is recommended to assure total protection.
5. **OPTIONAL** - Finish with WRAPTITE WTP10 Outerwrap, WTP120 Outerwrap or other approved outerwrap (“D” overwrap), spirally applied, to prevent mechanical damage or to provide UV protection.